



kameleon.
8-Device
Universal Remote Control
URC-9960



User's Guide

KAMELEON 8-DEVICE REMOTE

TABLE OF CONTENTS

Introduction	2
Installing Batteries	3
How Kameleon™ Works	3
Features And Function	4
Key Charts	4
Device Table	7
Adjusting Brightness	8
Programming Device Control	8
Programming A DVD/VCR Player Combo	10
Searching For Your Code	11
Checking The Codes	11
Using The Home Theater Mode	12
Control Organization	12
Programming The Home Theater Mode	13
Changing Volume Lock	14
Programming Volume Lock	14
Programming Volume Unlock	15
Using Macros	16
Programming A Favorite Channel Macro	16
Programming A Master Power Macro In	16
The Home Theater Mode	16
Clearing A Macro	17
Using Learning	18
Learning Precautions	18
Programming A Learning Key	18
Deleting A Single Learned Key	19
Deleting All Learned Keys In A Specific Mode	19
Reassigning Device Keys	20
Using Keymover	20
Programming Keymover	20
Restoring A Single Keymoved Key	21
Restoring All Keymoved Keys In A Single Mode	21
Using Channel Scan	22
Programming Favorite Channel Scan	22
Restoring Factory Default Settings	23
Clearing All Custom Programming	23
Manufacturer's Codes	24
Setup Codes For Audio Amplifiers	24
Setup Codes For Audio Receivers	24
Setup Codes For Cable Boxes	24
Setup Codes For CD Players	25
Setup Codes For DVD Players	25
Setup Codes For DVD Player/VCR Combos	26
Setup Codes For Home Automation	26
Setup Codes For PVRs	26
Setup Codes For Satellite Receivers	26
Setup Codes For Satellite Receiver/PVR Combos	26
Setup Codes For TVs	26
Setup Codes For TV/DVD Player Combos	28
Setup Codes For TV/VCR Combos	28
Setup Codes For VCRs	28
Setup Codes For Video Accessories	30
About Upgrading	30
Upgrade Procedure	30
Upgrade Exclusions	30
Troubleshooting	31
Device Mode Screens	32
Customer Support	41
Instruction To The User	41
Limited Warranty	41
Battery Use And Safety	42
Additional Information	42

INTRODUCTION


The OFA Kameleon™ 8-Device Remote (URC-9960) is a revolutionary universal remote control that uses Universal Electronics' Kameleon Technology. Moreover, it allows you to consolidate the clutter of all of your original remote controls into one easy-to-use product. Advanced features include:

- **Kameleon Technology** – dynamic menu screens that respond to device selection and illuminate only active keys
- **Home Theater Mode** – a custom mode that groups the most-often-used keys together for operating convenience in one mode
- **Macros** – for instant activation of favorite key sequences
- **Learning** – to capture unique functions from your devices' original remote controls
- **Key Mover** – for copying keys from one device to another, or to a different position in the same mode
- **Direct Code Setup** – for easy device programming with setup codes
- **Innovative Code Search** – allows setup of your devices without looking up codes
- **Favorite Channel Scan** – for easy channel surfing of favorite channels
- **Volume Lock** – to assign volume controls to individual devices or to one global device
- **Extensive Code Library** – largest and most efficient group of IR remote control codes for virtually every current brand and make
- **Upgradeability** – our unique telephone upgrade system ensures your remote control always has the latest setup codes when adding new devices in the future

After installing four (4) new AAA alkaline batteries (not included, see next page), you can immediately use the unit to control a Motorola Cable Box, a Toshiba DVD Player, a Philips Tivo PVR (DVR), a Pioneer CD Player and Audio Receiver, and a RCA TV, VCR, and Satellite Receiver. To control other brands than the default ones, see *Programming Device Control* on page 8.

USER'S GUIDE

INSTALLING BATTERIES

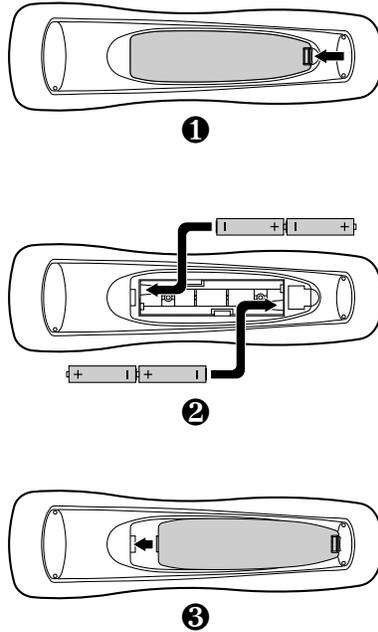

1. On the remote control's back, push the tab and lift off the battery cover.
2. Obtain four (4) new AAA alkaline batteries. Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the new batteries.
3. Press the battery cover back into place. The tab should click when the cover is locked.
4. If batteries are inserted correctly, the display will turn on and show all keys. If a key is not pressed after 7 seconds, the display will turn off.

NOTE: The batteries will need replacement if one of the following conditions occurs:

1. Pressing any key turns on all keys and icons.
2. The remote control no longer operates and the display flashes on and off continuously.

See "Battery Use And Safety" on page 42 for additional information.

HOW KAMELEON™ WORKS

Kameleon™ allows wireless controllers to dynamically change their appearance and functionality, to match the home entertainment environment. Moreover, this technology provides unparalleled ease-of-use and superior control by delivering a uniquely intuitive, graphical interface that intelligently illuminates only the active keys.

The OFA Kameleon 8-Device Remote uses Kameleon technology to provide the versatility of an LCD remote control with the feel of a traditional push button unit. The result is a stunning, bright display with engaging animation and touch-sensitive graphics for the user.

The remote control includes convenient *Menu Driven* programming. The displays are divided into two types of interactive screens: *Device Menus* for normal remote control use, and *Programming Menus* for feature setup. Acting like its namesake, Kameleon changes the *Device Menu* for the device being selected. For example, selecting TV displays a main menu that contains channel selection, volume control, and a keypad. However, selecting a DVD player still displays a menu with those same keys as the TV, but now navigation keys and transport controls are added for the DVD device.

Several devices have additional menus that can be accessed using **SCROLL** (see *Device Menu Screens*, starting on page 32). For example, TV has three menus: a main menu with keys for a general-purpose TV, a second menu screen that adds navigation keys and removes **FORMAT**, **INPUT** and **ENTER** keys, and a third menu screen that adds **INPUT**, **ENTER**, and **PIP** keys. Depending on desired features, a user has the flexibility to use any menu screen that works best for the selected device.

NOTE: The **AUX**, **CD**, **DVD**, and **PVR** modes do not have additional menu screens even though **SCROLL** is displayed.

Animated key graphics also provided enhanced operational feedback, so the user can easily see what mode is active and when the commands are communicating with a device. The end result of Kameleon technology is a simple, elegant, and intelligent way of organizing a large number of remote control keys for eight different devices in a relatively small case.


ONE KAMELEON 8-DEVICE REMOTE

FEATURES AND FUNCTIONS


Use the illustration below to locate features on the OFA Kameleon 8-Device Remote (URC-9960) and then refer to the *Key Charts* (starting on the right) to learn how they function.

NOTE: The illustration shows all remote control keys. In actual operation, only active keys used by the selected device are displayed and non-active keys are hidden.


To find out what type of devices can be controlled by each device key after programming, see the *Device Table* on page 7.

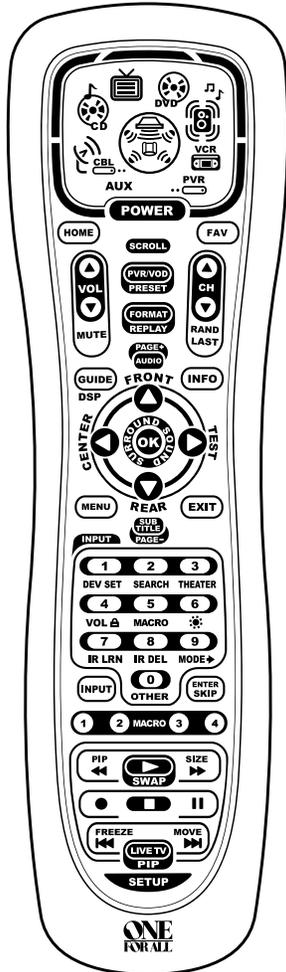


KEY CHARTS

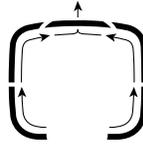

When a key is pressed, the **IR Segments** will animate. Outgoing animation (see arrows) indicates the remote control is sending IR signals to a selected device.

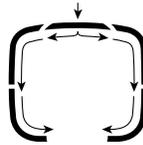

Incoming animation (see arrows) indicates the remote control is receiving IR signals from a device being learned (see *Using Learning* on page 17).

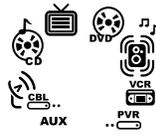

Press a **Device Key** once to select a desired home entertainment device to control (e.g., DVD). When selected, the **Device Key** will animate to indicate it is currently active. Also see the *Device Table* on page 7.



After programming, press the **Home Theater** key once to select the home theater mode (see *Using The Home Theater Mode* on page 12).



Press **POWER** once to turn on or off a selected device.



During programming, the **HOME** key will appear. Use it to exit the program screen or to return to the last-selected device key screen.



In the **AUX**, **CBL/SAT**, and **TV** modes, use **FAV** to scan through all channels, or after programming, to scan through 10 favorite channels.



In the **AUX**, **CBL/SAT**, **TV**, **AUDIO**, and **VCR** modes, use **SCROLL** to view additional key screens for the selected device.

USER'S GUIDE



Use **VOL ▲** (or **VOL ▼**) to raise (or lower) the sound volume for the selected device (also see *Changing Volume Lock* on page 14).

Press **MUTE** once to turn the sound off or on.



In the **AUX** and **CBL/SAT** modes, use **PVR/VOD** to access PVR/VOD programs (if available on your cable or satellite service).



In the **AUDIO** mode, use **PRESET** to access preset stations on your audio device.




In the **TV** mode, use **FORMAT** to change the aspect ratio or zoom (if feature is available on your TV).



In the **DVD** or **PVR** mode, press **REPLAY** once to replay a DVD chapter or a recorded program on your PVR (or DVR).

In the **CBL/SAT** and **AUX** modes, press **SCROLL** once to display **REPLAY** and then press **REPLAY** once to replay a VOD program (if available on your cable or satellite service).

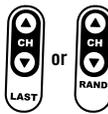

Use **CH ▲** (or **CH ▼**) to select the next higher (or lower) channel.

In all modes except **CD**, **DVD**, and **PVR**, press **LAST** once to recall the last channel.

In the **PVR** mode, use **LAST** to select live or recorded video.

In the **CD** or **DVD** modes, press **RAND** to play random tracks or chapters.



In the **AUX** and **CBL/SAT** modes, use **PAGE+** or **PAGE-** to page up or down through channels in the program guide.



In the **DVD** mode, press **AUDIO** once to access DVD audio formats (if available).



In all modes except **AUDIO**, use **GUIDE** to display your selected device's program guide or setup menu.



In the **AUDIO** mode, use **DSP** to access DSP features (if available) on your audio device.



Use **INFO** to display the current channel and program information.



In the **AUX**, **CBL/SAT**, **CD**, **DVD**, and **PVR** modes, use the **Cursor Keys** to move the cursor in the program guide and menu screens.

Use **OK** to choose options from your selected device's menu or guide.

In the **TV** or **VCR** mode, press **SCROLL** once to access the **Cursor** and **OK** Keys.

In the **AUDIO** mode, press **SCROLL** twice to access the **Cursor** and **OK** Keys.



In the **AUDIO** mode, use the **Cursor Keys** to move the cursor to select or test surround sound channels on your audio device. Also see **VOL** keys (above left).

Use **OK** to choose options from your audio device's menu or guide.

continued on next page...

KAMELEON 8-DEVICE REMOTE

FEATURES AND FUNCTIONS

KEY CHARTS (CONTINUED)




Press **MENU** once to display your selected device's main menu.




Use **EXIT** to exit from your selected device's guide or menu.



In the **DVD** or **AUDIO** mode, press **SUBTITLE** once to display (or turn off) subtitles, if available on your DVD or audio device.

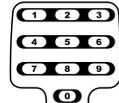

In all modes except **AUDIO**, use the **Number Keys** (1 ~ 9 and 0) to directly select channels (e.g., **009** or **031**) or enter numbers.

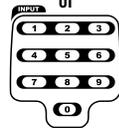

In the **AUDIO** mode, use the **Number Keys** to directly select inputs 1 ~ 9 and 10.

To enter channels in the **AUDIO** mode, press **SCROLL** three times to view channel **Number Keys** (see above)



Use **INPUT** to change the input source for a selected device.




For certain brands in all modes except **CD** and **AUDIO**, press **ENTER** once after entering numbers (if required on your original remote control).



For **CD** or **AUDIO** modes, press **SKIP** once to skip to the next track on your audio device.



After programming, press **Macro Key 1 ~ 4** once to run a macro (see *Using Macros* on page 16).

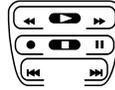

OR




In the **CD**, **DVD**, **AUDIO**, and **VCR** modes, use the **Transport Keys** to control the device's transport.

In the **PVR** mode, use the **LIVE Transport Keys** to control PVR/DVR video.

In the **CBL/SAT** or **AUX** mode, press **SCROLL** once to display and use the **LIVE Transport Keys** to control VOD (Video On Demand) if available on your cable/satellite service.

In all modes except **TV**, press **●** twice to record a program on your device (if function is available).

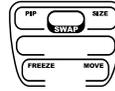

In the **TV** mode, press **PIP** once (or press **SCROLL** twice) to display the **PIP Keys**. Use them to control the following Picture-In-Picture features (if available) on your TV:

Use **PIP** to switch the Picture-In-Picture feature on or off.

Use **SWAP** to switch images and sound between the main and window pictures.


Use **SIZE** to select a different picture window size.

Press **FREEZE** once to capture a frame of video in the main picture. Press it again to resume normal viewing.

Use **MOVE** to move the window picture to different places in the main picture.

Use **SETUP** to enable the programming screen.

USER'S GUIDE

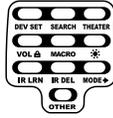

In the program mode, use the **Program Keys** to personalize the remote control as follows:



Use **DEV SET** to program your device codes. See *Programming Device Control* on page 8.



Use **SEARCH** as an alternate way to set up a device by searching available codes. See *Searching For Your Code* on page 11.



Use **THEATER** to create a custom mode with favorite remote control keys from different devices in your home theater system. See *Using The Home Theater Mode* on page 12.



Use **VOL ▲ (Volume Lock)** to set volume controls for individual or global device use. See *Changing Volume Lock* on page 14.



Use **MACRO** to program a series of commands on five available macro keys. See *Using Macros* on page 16.



Use **☼ (Brightness)** to adjust the brightness level of the EL display. See *Adjusting Brightness* on page 8.



Use **IR LRN** and **IR DEL** to add and delete key functions learned from your original device remote controls. See *Using Learning* on page 17.



Use **MODE** to reassign an unused device key to control a second device. See *Reassigning Device Keys* on page 20.



Use **OTHER** to program other functions. See the *Table of Contents* on page 2 for sections on *Checking The Codes*, *Programming Favorite Channel Scan*, *Using Keymover*, or *Upgrading*.

DEVICE TABLE

NOTE: Please refer to the table below when performing the instructions in "Programming Device Control" on page 8.

After programming, the OFA Kameleon 8-Device Remote will be able to control the following types of devices:


DEVICE KEY	CONTROLS THESE DEVICES
AUX	Video Accessory or second device (e.g., Cable Box, Satellite Receiver, DVD Player, etc.) by reassigning device keys (see <i>Reassigning Device Keys</i> on page 20)
	Cable Box (Converter), Satellite Receiver, or Satellite/PVR Combo
	CD Player or Home Automation
	Television
	DVD Player, TV/DVD Player Combo, or DVD/VCR Player Combo
	Audio Amplifier, Audio Receiver, or Home-Theater In-A-Box Device (listed under <i>Setup Codes For Audio Receivers</i> on page 24)
	VCR or TV/VCR Combo
	PVR (DVR)

KAMELEON 8-DEVICE REMOTE

ADJUSTING BRIGHTNESS


The OFA Kameleon 8-Device Remote has five levels of brightness adjustment and is set to the middle one at the factory. To increase or decrease the brightness, perform the following steps:

1. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear.

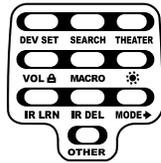

NOTE: If the display turns off because of inactivity, you will need to start the programming sequence again by repeating this step.

2. Press  (**Brightness**) once. The **Brightness** programming screen will appear:

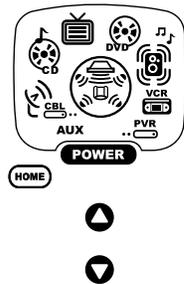

- To increase brightness, press  one or more times.
 - To decrease brightness, press  one or more times.
3. When the desired brightness is achieved, press **HOME** twice to exit programming and return to the last-selected device menu screen.

*NOTE: Otherwise, to program other features, press **HOME** only once to return to the **Program Keys**.*

PROGRAMMING DEVICE CONTROL

The OFA Kameleon 8-Device Remote is preset at the factory to operate the following devices:

- Motorola Cable Box (using the **AUX** key)
- Philips Tivo PVR (DVR)
- Pioneer CD Player and Audio Receiver
- RCA TV, VCR, and Satellite Receiver
- Toshiba DVD Player


To control devices other than the default brands, perform the following steps; otherwise skip this section:

NOTE: To control a DVD Player/VCR Combo, perform the instructions in "Programming DVD Player/VCR Combo Control" on the page 10.

1. Turn on a desired device (e.g., VCR or DVD player) and, if applicable, insert media (e.g., cassette or disc).

NOTE: Please read steps 2 through 9 completely before proceeding. Before starting step 2, review the "Manufacturer's Codes" (starting on page 24). Brands are listed alphabetically in order of most popular ones first. Highlight or write down the devices and the codes you wish to program.

2. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

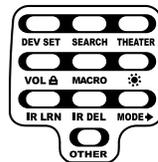


NOTE: If the display turns off due to inactivity, the remote control will exit programming and return to the last-selected device menu screen. To start programming again, repeat this step.

*NOTE: To stop programming at any time, press **HOME** once to return to the **Program Keys** screen. Press **HOME** once more to exit completely.*

3. Press **DEV SET** once. The **Device Setup** programming screen will appear (as shown on the next page):

USER'S GUIDE

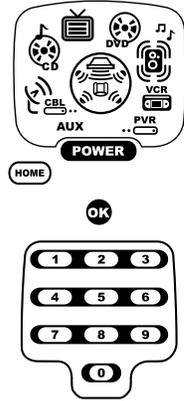

4. Press a device key once (i.e., **AUX**, **CBL/SAT**, **CD**, **TV**, **DVD**, **AUDIO**, **VCR**, or **PVR**). The selected device key will animate.

NOTE: Please refer to the Device Table on page 7 when choosing a device key for programming.

5. Use the *Manufacturer's Codes* (starting on page 24) to locate the type of device and brand name and then use the **Number Keys** to enter the first four-digit code for your device. If performed correctly, the bottom two IR segments will flash twice.

NOTE: If the bottom two IR segments displayed one long flash instead, a mistake has occurred. Try entering the same code again.

6. Aim the remote control at the device and press **POWER** once. The device should turn off. If it does not, repeat steps 5 and 6, trying each code for your brand until you find one that works. If it still doesn't work, try *Searching For Your Code* on page 11.

*NOTE: If the device does not have a **POWER** key, press the ► (Play) key.*

7. If the code works, press **OK** once. The two bottom IR segments will display one long flash.
8. If desired, repeat steps 4 through 7 for each device you want to control. If finished, press **HOME** twice to exit programming and return to the last-selected device menu screen.
9. For future reference, write down each working device code in the following boxes:

AUX Code:

Device Type: _____

CBL/SAT Code:

Device Type: _____

CD Code:

Device Type: _____

DVD Code:

Device Type: _____

TV Code:

DVD Code:

Device Type: _____

AUDIO Code:

Device Type: _____

VCR Code:

Device Type: _____

PVR Code:


KAMELEON 8-DEVICE REMOTE

PROGRAMMING DVD PLAYER/ VCR COMBO CONTROL


1. Turn on the DVD Player/VCR Combo and insert a DVD.

NOTE: Please read steps 2 through 10 completely before proceeding. Before starting step 2, review the "Setup Codes For DVD Player/VCR Combos" (on page 26). Brands are listed alphabetically in order of most popular ones first. Highlight or write down the devices and the codes you wish to program.

2. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

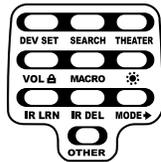

3. Press **DEV SET** once. The *Device Setup* programming screen will appear:

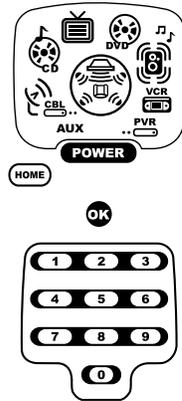

4. Press **DVD** once. The key will animate.
5. Use the *Setup Codes For DVD Player/VCR Combos* (on page 26) to locate the brand name and then use the **Number Keys** to enter the first four-digit code for your device. If performed correctly, the two bottom IR segments will flash twice.

NOTE: If the two bottom IR segments displayed one long flash instead, an error has occurred. Try entering the same code again.

6. Aim the remote control at the device and press **POWER** once. The device should turn off.
7. If the code works, press **OK** once. The two bottom IR segments will display one long flash.
8. (Optional) If you've located a setup code that works, but it also has a separate VCR code as listed on page 26, you'll also need to program it into the remote control to access VCR controls as follows:
 - a. Press **VCR** once.
 - b. Using the **Number Keys**, enter the four-digit VCR code for your DVD Player/VCR Combo. If performed correctly, the two bottom IR segments will flash twice.
 - c. Press **OK** once. The two bottom IR segments will display one long flash.

*NOTE: If a separate VCR setup code is not listed, you can use the **VCR** key to program a separate VCR device or another device (see "Reassigning Device Keys" on page 20).*

9. To exit programming, press **HOME** twice. The display will return to the last-selected device menu screen.
10. For future reference, write down the working DVD Player/VCR Combo code in the below boxes:

DVD Player/VCR Code:

VCR Code (if used):

USER'S GUIDE


SEARCHING FOR YOUR CODE

If your device does not respond to the remote control after trying all codes listed for your brand, or if your brand is not listed at all, try searching for your code.

NOTE: Before performing a code search for a CD or DVD player or a VCR, turn on the device and insert the required media.

For example, to search for a code for your TV:

1. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

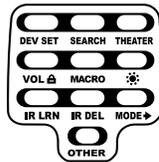

2. Press **SEARCH** once. The *Search Codes* programming screen will appear:



3. Press a device key once (e.g., **TV**). The selected device key will animate. The device's *Main Menu* screen will appear with the **HOME** key still displayed.
4. Press **POWER** once to select it as the search test function. The *Search Programming* screen will appear again.

NOTE: With **POWER** as the search test function, a "Power On" IR command will be sent to the device each time a test code is sent. As a confirmation, the IR segments will display an outgoing animation.

NOTE: If your device or its original remote control does not have a Power key, select a different test function in this step (e.g., **CH+**, **VOL+**, **Play**, etc).

5. Aim the remote control at the device (e.g., **TV**) press **▲** one or more times and stop when a working code performs the test function selected in step 4. If desired, use **▼** to try a previous code.


NOTE: In the search mode, the remote control will send IR codes from its library to the selected device, starting with the most popular code first.

6. To lock in the code, press **OK** once. The two bottom IR segments flash twice.
7. To search for codes of your other devices, repeat steps 3 to 6, but use the appropriate device key and test function key for the device you are searching for.
8. To exit programming, press **HOME** twice. The display will return to the last-selected device menu screen.

CHECKING THE CODES

If you have set up the remote control using the *Searching For Your Code* procedure (on the left), you may need to find out which four-digit code is operating your equipment. For example, to find out which code is operating your TV:

1. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

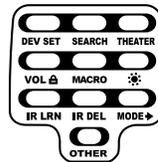


continued on next page...

KAMELEON 8-DEVICE REMOTE

CHECKING THE CODES (cont'd)

2. Press **OTHER** once. The *Other* programming screen will appear:

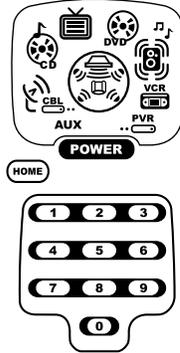

3. Using the **Number Keys**, enter **9 9 0**. The bottom two IR segments will flash twice.
4. Press a desired device key once (i.e., **AUX, CBL/SAT, CD, TV, DVD, AUDIO, VCR, or PVR**). The selected device key will animate.
5. To view the code for the first digit, press **1** once. Count the number of times the two bottom IR segments flash (e.g., three flashes = 3) and write down the number in leftmost box in the TV code boxes on page 9.
- NOTE: If a code digit is "0", the two bottom IR segments will not flash.*
6. Repeat step 5 three more times for remaining digits. Use **2** for the second digit, **3** for the third digit, and **4** for the fourth digit. Write down the code digits in the remaining TV code boxes on page 9.
- NOTE: If you enter an invalid number (e.g., 7) or key (e.g., Play), the two bottom IR segments will display one long flash and return to the "Other" programming screen. Start again with step 2 above.*
7. To check for codes of other devices, repeat steps 4 to 6, but substitute the appropriate device key for each device you are checking. Write down the device's code digits in the appropriate code boxes on page 9.
8. To exit programming, press **HOME** twice. The display will return to the last-selected device menu screen.

USING THE HOME THEATER MODE

The OFA Kameleon 8-Device Remote includes a custom Home Theater mode. After the **Home Theater** key is programmed, it will allow you to access four groups of remote control keys without having to change device modes.

CONTROL ORGANIZATION

ABOUT CONTROL GROUPS

For Home Theater programming, the remote control's keys are grouped by type of control into the following four control groups:

<i>Video Playback Group:</i>	Transport Controls (Rewind, Play, Fast Forward, Stop, Pause, Record, Skip Forward, Skip Back), and LIVE TV
<i>Volume Controls Group:</i>	VOL+, VOL-, and MUTE
<i>Channel Controls Group:</i>	CH+, CH-, INPUT, Keypad (0 ~ 9), FAV, ENTER, and LAST
<i>Menu Controls Group:</i>	Cursor Controls (Up, Down, Left, and Right), OK, PAGE+, PAGE-, MENU, INFO, GUIDE, and EXIT

ABOUT DEVICE MODES

Moreover, the above *Control Groups* can be used in the following modes:

<i>Video Playback Group:</i>	AUDIO, AUX, CBL/SAT, CD, DVD, PVR, and VCR
<i>Volume Controls Group:</i>	AUDIO, AUX, CBL/SAT, CD, DVD, PVR, TV, and VCR
<i>Channel Controls Group:</i>	AUX, CBL/SAT, DVD, PVR, TV, and VCR
<i>Menu Controls Group:</i>	AUDIO, AUX, CBL/SAT, CD, DVD, PVR, TV, and VCR

USER'S GUIDE

FACTORY DEFAULT SETTINGS


At the factory, the *Control Groups* are assigned the following modes as default settings:

- Video Playback Group:* **DVD**
- Volume Controls Group:* **AUDIO**
- Channel Controls Group:* **CBL/SAT**
- Menu Controls Group:* **CBL/SAT**


If the default settings fit your needs, you can skip programming this mode. Otherwise, perform the steps in the following section to assign device modes to the *Control Groups*.

PROGRAMMING THE HOME THEATER MODE

1. Press any device key once (i.e., **AUX, CBL/SAT, CD, TV, DVD, AUDIO, VCR, or PVR**). The selected device key will animate.
2. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

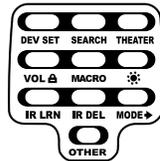


3. Press **THEATER** once. The *Video Playback* programming screen will appear:

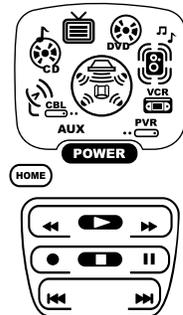


NOTE: If a device key is animated, it is assigned to this function group. To continue programming the Home Theater mode, you must select a device key, even if it is the same one that is currently animated.

3. To assign a mode to the *Video Playback* group, press a device key once (i.e., **AUX, CBL/SAT, CD, TV, DVD, AUDIO, VCR, or PVR**). Then the *Volume Controls* programming screen will appear:

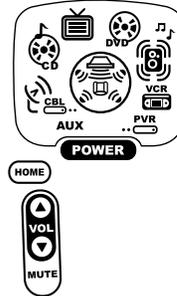

NOTE: If a device key is animated, it is assigned to this function group. To continue programming the Home Theater mode, you must select a device key, even if it is the same one that is currently animated.

4. To assign a mode to the *Volume Controls* group, press a device key once. Then the *Channel Controls* programming screen will appear:

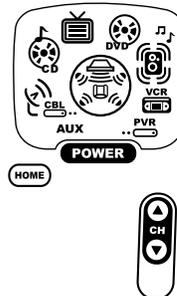

NOTE: If a device key is animated, it is assigned to this function group. To continue programming the Home Theater mode, you must select a device key, even if it is the same one that is currently animated.


continued on next page...

KAMELEON 8-DEVICE REMOTE

USING THE HOME THEATER MODE

PROGRAMMING THE HOME THEATER MODE (CONTINUED)

- To assign a mode to the *Channel Controls* group, press a device key once. Then the *Menu Controls* programming screen will appear:

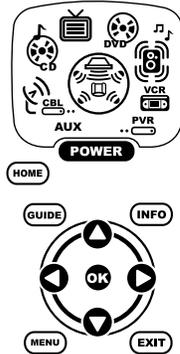

NOTE: If a device key is animated, it is assigned to this function group. To continue programming the Home Theater mode, you must select a device key, even if it is the same one that is currently animated.

- To assign a mode to the *Menu Controls* group, press a device key once. Since *Home Theater* programming is now complete, the **Program Keys** will appear again.
- To exit programming, press **HOME** once. The display will return to the last-selected device menu screen.


CHANGING VOLUME LOCK

The OFA Kameleon 8-Device Remote is set at the factory for independent volume control of each selected device.


However, you may change the Volume Lock setting to *Global Volume Lock* so that a device's volume will be locked to one mode (e.g., to control TV volume in all other modes). After that, if desired, you can perform *Individual Volume Unlock* on a selected device to set its volume control for independent operation.

LOCKING VOLUME CONTROL TO ONE MODE (GLOBAL VOLUME LOCK)

- Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

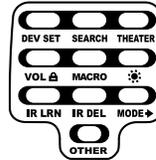

- Press **VOL ▲** once. The *Volume Lock* programming screen will appear:

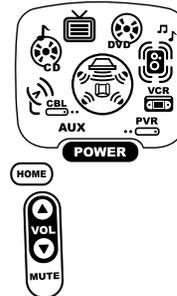


- Press a device key once (i.e., **AUX**, **CBL/SAT**, **CD**, **TV**, **DVD**, **AUDIO**, **VCR**, or **PVR**) where you want the volume controls locked to. The two bottom IR segments will flash twice and the **Program Keys** will appear again.
- To exit programming, press **HOME** once. The display will return to the last-selected device menu screen.
- Now, when you press **VOL ▲**, **VOL ▼**, or **MUTE**, the selected device's volume will be controlled, regardless of the mode selected.


USER'S GUIDE

UNLOCKING VOLUME CONTROL FOR A SINGLE DEVICE (INDIVIDUAL VOLUME UNLOCK)

1. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

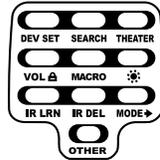

2. Press **VOL ▲** once. The *Volume Lock* programming screen will appear:

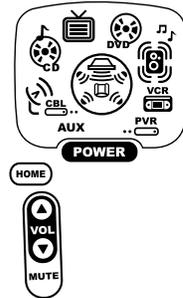

3. Press **VOL ▼** once. Then press a device key once (i.e., **AUX**, **CBL/SAT**, **CD**, **TV**, **DVD**, **AUDIO**, **VCR**, or **PVR**) where you want the volume controls unlocked. The two bottom IR segments will flash twice and the **Program Keys** will appear again.

NOTE: The programming mode is still active as denoted by the flashing **SETUP** key. If desired, use the other **Program Keys** to continue programming (see *Table of Contents* on page 2 for related sections).

4. If desired, repeat steps 1 through 3 (of this section) for each device that you want volume to be unlocked.
5. To exit programming, press **HOME** once. The display will return to the last-selected device menu screen.
6. Now, after you select a device that has volume unlocked, pressing **VOL ▲**, **VOL ▼**, or **MUTE** will control the device's volume only in its own mode.

UNLOCKING ALL VOLUME CONTROL (RESTORING DEFAULT SETTING)

1. Perform steps 1 and 2 of the previous section.
2. Press **VOL ▲** once. The two bottom IR segments will flash twice and the **Program Keys** will appear again.
3. To exit programming, press **HOME** once. The display will return to the last-selected device menu screen.
4. Volume will again be independently controlled according to its default states for all programmed devices.

KAMELEON 8-DEVICE REMOTE

USING MACROS

The OFA Kameleon 8-Device Remote includes five **Macro Keys**, **M1** through **M4** and **POWER**. Each one can be set up to perform a repetitive, time-consuming operation with the press of a single key.

NOTE: A macro programmed onto the **POWER** key can only be accessed in the **HOME THEATER** mode. Pressing it in any other mode will only send a "Power On/Off" IR command to the selected device.

A macro can be used to control a home theater operation, to set a favorite channel, or for other multiple functions you would like to control with one key press. Moreover, each **Macro Key** can hold up to 15 key presses total.

NOTE: Programming a new macro over an existing one will erase the original macro.


PROGRAMMING A FAVORITE CHANNEL MACRO

With so many channels available on your cable or satellite system, you can program a macro that directly selects a favorite channel with one key press.


For example, let's assume your favorite cable programs are on channel 71. Use the following instructions to program a macro for direct access of this channel:

NOTE: The following example assumes all equipment is turned off and that the TV is connected through the Cable Box with TV tuning set to channel 3.

1. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

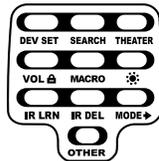

2. Press **MACRO** once. The Macro programming screen will appear (as shown above right):

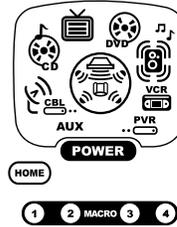

3. Press an open **Macro Key** (e.g., **M1**, **M2**, **M3**, or **M4**). The last-selected device menu screen, including **HOME**, will be displayed.
4. Enter a desired macro sequence of up to 15 key presses. For this example, press **TV** once, followed by **POWER** once, and then enter **0 3** for the TV's channel number. Next, press **CBL/SAT** once, followed by **POWER** once, and then enter **0 7 1** for the Cable Box's channel number.

NOTE: If there are more than 15 key presses in the sequence, the bottom IR segments will display a long flash denoting an error. The display will return to the last-selected device menu screen. To program the macro, start again with step 3.

5. To save the macro, press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear again.
6. Exit programming by pressing **HOME** once. The display will return to the last-selected device menu screen.
7. Now, if you aim the remote control at the devices selected in step 4 and press the programmed **Macro Key** once, the TV will turn on and tune to channel 3. Then, the Cable Box will turn on, and tune to channel 071.


PROGRAMMING A MASTER POWER MACRO IN THE HOME THEATER MODE

A macro can be programmed onto the **POWER** key to turn on or off as many as seven Home Theater devices.


NOTE: This following example assumes the Home Theater system contains a Satellite Receiver, a DVD Player, an Audio Receiver, and a TV.

USER'S GUIDE

1. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

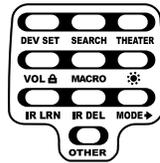

2. Press **MACRO** once. The *Macro* programming screen will appear:

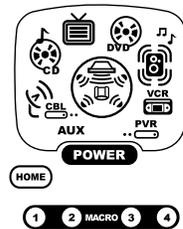


3. Press **POWER** once. The last-selected device menu screen, including **HOME**, will be displayed.
4. Enter the macro sequence. For this example, press **CBL/SAT** once, followed by **POWER** once. Next, press **DVD** once, followed by **POWER** once. Then press **AUDIO** once, followed by **POWER** once. Finally, press **TV** once, followed by **POWER** once, and then the **Home Theater** key once.
5. To save the power macro, press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear again.
6. Exit programming by pressing **HOME** once. The display will return to the last-selected device menu screen.
7. To test the power macro, first make sure all home theater devices selected in step 4 are turned on. Aim the remote control at the devices and press the **Home Theater** key once, followed by **POWER** once. The devices should turn off in this order: Satellite Receiver, DVD Player, Audio Receiver, and TV.


To turn on the devices on again in the same order as above, press **POWER** once.

CLEARING A MACRO

1. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

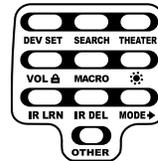

2. Press **MACRO** once. The *Macro* programming screen will appear:

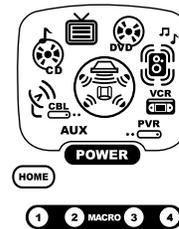

3. Select the **Macro Key** to be cleared and press it once. The last-selected device menu screen will be displayed.
4. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear again.
5. To exit programming, press **HOME** once. The display will return to the last-selected device menu screen.

KAMELEON 8-DEVICE REMOTE

USING LEARNING

The OFA Kameleon 8-Device Remote includes a *Learning* feature so you can add functions that are unique to your home entertainment devices (e.g., VCR Tracking Up or Down). However, there are some considerations:


LEARNING PRECAUTIONS

- Your original remote controls must be in working order for learning to work properly.
- Learned keys are mode specific, so each one can store a unique function for each mode.
- Learned keys can be used in macros (see *Using Macros* on page 16).
- Do not use the following keys for learning: **Device Keys, M1–M4, SETUP, FAV, SCROLL, PRESET, PVR VOD, or Record (•) Key.**
- Learning capacity is approximately 16 to 25 keys, depending on the code being learned.
- If both learned and keymoved functions are assigned to the same key, the last programmed function will be stored.
- A learned function cannot be used as a source for Keymover (see *Using Keymover* on page 20).
- Certain device codes are not learnable including multi-frequency types, some high frequency ones, and other unusual formats.
- For optimum learning, avoid high levels of ambient light such as natural sunlight or energy-efficient fluorescent lights.


NOTE: Please have your original remote controls handy before programming learning. Be sure to press each teaching key within 5 seconds of the previous entry. Otherwise, the OFA Kameleon 8-Device Remote will exit the programming mode.

PROGRAMMING A LEARNING KEY


- Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear (as shown above right) as **SETUP** flashes repeatedly.

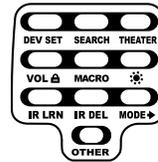

- Press **IR LRN** once. The *IR Learn* programming screen will appear:

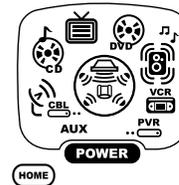

- Press a device key once (i.e., **AUX, CBL/SAT, CD, TV, DVD, AUDIO, VCR, or PVR**) to assign a mode for learning. The selected device menu screen, including **HOME**, will be displayed.
- Place the OFA Kameleon 8-Device Remote head-to-head (about 2" apart) from your original remote control. Also locate the key (on your original remote control) that will serve as the teaching function.

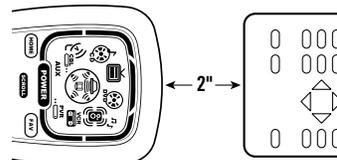

- On the OFA Kameleon 8-Device Remote, select and press a desired key where the learned function will be stored. The IR segments will display an incoming animation, continue for three revolutions, and then the entire display will turn off.

After the display is off, press and hold the teaching key (on your original remote control) until the display (on the OFA Kameleon 8-Device Remote) turns on again. The two bottom IR segments will flash twice when the code is successfully captured.

NOTE: If the two bottom IR segments display one long flash, a learning error has occurred. Try repeating this step again until a successful capture occurs. If the


USER'S GUIDE

function is still not captured, press **HOME** twice to exit programming and review the "Learning Precautions" on the previous page. If needed, also see "Troubleshooting" on page 31. After review, start programming again at step 1.


- To learn other functions, repeat steps 3 through 5 as desired.
- To exit programming, press **HOME** twice. The display will return to the last-selected device menu screen.

DELETING A SINGLE LEARNED KEY

- Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

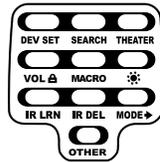


- Press **IR DEL** once. The **IR Delete** programming screen will appear:

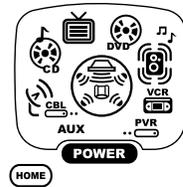


- Press a device key once (i.e., **AUX, CBL/SAT, CD, TV, DVD, AUDIO, VCR, or PVR**) for the mode where the learned key to be deleted resides. The selected device menu screen, including **HOME**, will be displayed.
- Press the learned key to be deleted twice. Upon deletion, the two bottom IR segments will flash twice as confirmation. The **Program Keys** will appear again.
- If desired, repeat steps 2 through 5 to delete another learned key.
- Exit programming by pressing **HOME** once. The display will return to the last-selected device menu screen.

DELETING ALL LEARNED KEYS IN A SPECIFIC MODE

- Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

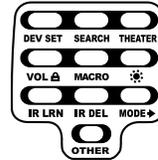

- Press **IR DEL** once. The **IR Delete** programming screen will appear:

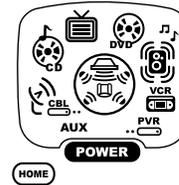


- Press a device key once (i.e., **AUX, CBL/SAT, CD, TV, DVD, AUDIO, VCR, or PVR**) for the mode where the learned keys to be deleted reside. The selected device menu screen, including **HOME**, will be displayed.
- Press the same device key (as in step 3) once. Upon deletion, the two bottom IR segments will flash twice as confirmation. The **Program Keys** will appear again.
- If desired, repeat steps 2 through 5 to delete other learned keys from another mode.
- Exit programming by pressing **HOME** once. The display will return to the last-selected device menu screen.

KAMELEON 8-DEVICE REMOTE

REASSIGNING DEVICE KEYS

The OFA Kameleon 8-Device Remote can be set to control a second device. For example, to control a TV, a cable box, and two DVD players, you can reassign the unused **AUX** key to operate the second DVD player as follows:

1. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

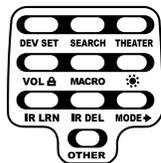

2. Press **MODE** once. The *Mode Mover* programming screen will appear:



3. For the source mode, press a device key once (i.e., **AUX**, **CBL/SAT**, **CD**, **TV**, **DVD**, **AUDIO**, **VCR**, or **PVR**). For this example, press **DVD** once. The selected device menu screen, including **HOME**, will be displayed.

NOTE: Only one device can be assigned to an unused device key at a time.

4. For the destination mode, press a device key once (i.e., **AUX**, **CBL/SAT**, **CD**, **TV**, **DVD**, **AUDIO**, **VCR**, or **PVR**). For this example, press **AUX** once. Upon reassignment, the two bottom IR segments will flash twice as confirmation. The **Program Keys** will appear again.
5. For this example, the **AUX** key is now ready to be set up to control your second DVD player. See *Programming Device Control* on page 8. If desired, repeat steps 2 to 5 to reassign another device.
6. Exit programming by pressing **HOME** once. The display will return to the last-selected device menu screen.

USING KEYMOVER


The OFA Kameleon 8-Device Remote includes a *Keymover* feature that allows you to map (or copy) keys from one mode (i.e., source mode) to another mode (i.e., destination mode).

NOTE: Do not use any of the Device Keys as a source or destination key.


PROGRAMMING KEYMOVER

For example, if your DVD player does not have volume control, you can map those keys (i.e., **VOL▲**, **VOL▼**, and **MUTE**) from the TV mode to DVD mode as follows:


1. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

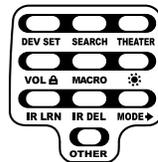

2. Press **OTHER** once. The *Other* programming screen will appear:

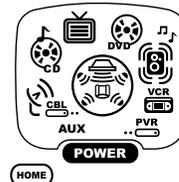

3. Using the **Number Keys**, enter **9 9 4**. The two bottom IR segments will flash twice.
4. For the source mode, press a desired device key once (i.e., **AUX**, **CBL/SAT**, **CD**, **TV**, **DVD**, **AUDIO**, **VCR**, or **PVR**). For this example, press **TV** once. The selected source device menu screen, including **HOME**, will be displayed.

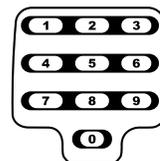


USER'S GUIDE

- For the source key, press a key to be moved once. For this example press **VOL▲** once.
- For the destination mode, press a desired device key once (i.e., **AUX, CBL/SAT, CD, TV, DVD, AUDIO, VCR, or PVR**). For this example, press **DVD** once. The selected destination device menu screen, including **HOME**, will be displayed.
- For the destination key, press a key to be moved once. For this example press **VOL▲** once. Upon keymoving, the two bottom IR segments will flash twice as confirmation. The **Program Keys** will appear again.
- Repeat steps 3 through 7 two more times to map the remaining volume control keys, substituting **VOL▼** and **MUTE** as source and destination keys in steps 5 and 7.
- Exit programming by pressing **HOME** once. The display will return to the last-selected device menu screen.


Upon completion of the above procedure, you can now use your OFA Kameleon 8-Device Remote to control the TV's volume and mute in the DVD mode, as well as in the TV mode.

RESTORING A SINGLE KEYMOVED KEY

- Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

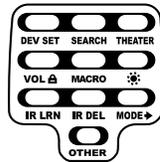

- Press **OTHER** once. The *Other* programming screen will appear (as shown above right):

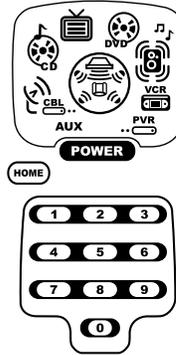

- Using the **Number Keys**, enter **9 9 4**. The two bottom IR segments will flash twice.
- Press the destination mode once where the keymoved key is stored. Then press the destination key twice. Upon key restoration, the two bottom IR segments will flash twice as confirmation. The **Program Keys** will appear again.
- If desired, repeat steps 1 and 2 to restore another key.
- Exit programming by pressing **HOME** once. The display will return to the last-selected device menu screen.

RESTORING ALL KEYMOVED KEYS IN A SINGLE MODE


- Perform steps 1 through 3 of *Programming Keymover* on the previous page.
- Press the destination mode twice where the keymoved keys are stored. Upon key restoration, the two bottom IR segments will flash twice as confirmation. The **Program Keys** will appear again.
- Exit programming by pressing **HOME** once. The display will return to the last-selected device menu screen.

KAMELEON 8-DEVICE REMOTE


USING CHANNEL SCAN

In the **AUX**, **CBL/SAT**, or **TV** mode, use the **FAV** key to start a 3-second scan of all channels. If programmed, use the **FAV** key to scan only your favorite channels to view a desired channel (see *Programming Favorite Channel Scan* below).

1. If *Favorite Channel Scan* has been set up, skip to step 2. Otherwise, press **AUX**, **CBL/SAT**, or **TV** once. The two bottom IR segments flash once.
2. Press **FAV** once. The IR segments will display outgoing animation as each channel is changed.
 - If *Favorite Channel Scan* has been set up, scanning of favorite channels will start and cycle through stored channels for 3 minutes or until stopped by pressing any key.
 - If *Favorite Channel Scan* has not been set up, scanning will start with the current channel, then proceed to the next channel up and cycle through all channels for 3 minutes or until stopped by pressing any key.
3. To stop scanning channels at any time, press any key once.

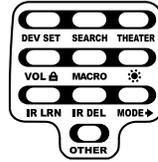

2. Select a *Favorite Channel Mode* by pressing **AUX**, **CBL/SAT**, or **TV** once. The two bottom IR segments flash once as the selected device key animates.
3. Press **OTHER** once. The *Other* programming screen will appear:

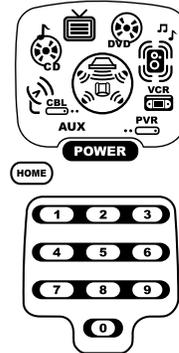

4. Using the **Number Keys**, enter **9 9 6**. The two bottom IR segments will flash twice and display the *Favorite Channel* programming screen.

NOTE: If the the two bottom IR segments display one long flash, an error has occurred. Try repeating this step.

5. Using the **Number Keys**, enter a favorite channel number (e.g., **0 1 2**). Then press **SETUP** once. The two bottom IR segments will flash three times confirming your entry.

*NOTE: If the original remote control required pressing an Enter key to change the channel, also press the **ENTER** key after the channel number (e.g., **0 1 2 ENTER**).*

6. If desired, repeat step 5 for each channel to be stored, up to a total of 10 channels.

*NOTE: After storing 10 channels, the remote control will exit the *Favorite Channel* programming screen and again display the **Program Keys**.*

PROGRAMMING FAVORITE CHANNEL SCAN

In the **AUX**, **CBL/SAT**, or **TV** mode, you can store a list of up to 10 favorite channels, in any order, that will be immediately scanned when **FAV** is pressed (see *Using Channel Scan* above).

*NOTE: Favorite channels can only be programmed for one mode. After programming, if **FAV** is pressed while in another mode, the remote control will start a normal channel scan instead (if applicable to the selected device).*

1. Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear (as shown above right) and **SETUP** flashes repeatedly.

USER'S GUIDE


- To exit programming with less than 10 favorite channels stored, press **HOME** twice. The display will return to the last-selected device menu screen.
- Using the **Number Keys**, enter **9 7 7**. The two bottom IR segments will flash twice pause and flash twice again to confirm the unit has been restored to factory default settings.
- Exit programming by pressing **HOME** once. The display will return to the last-selected device menu screen.

RESTORING FACTORY DEFAULT SETTINGS


The OFA Kameleon 8-Device Remote includes an *Setup Code Reset* program. You can use it to restore all your programmed codes to factory settings and delete all custom programming.

IMPORTANT: Executing this program will erase all code settings and all custom settings for Home Theater, Macros, Learned Keys, Reassigned Device Keys, Keymoved Keys, Favorite Channels, and all device settings.

- Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

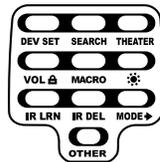

- Press **OTHER** once. The *Other* programming screen will appear:

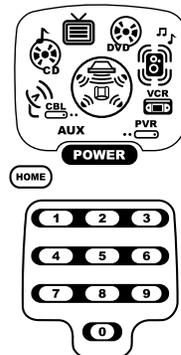


CLEARING ALL CUSTOM PROGRAMMING

The OFA Kameleon 8-Device Remote contains a *Custom Programming Reset* program. You can use it to remove all custom programming, except your setup codes and reassigned device keys.

IMPORTANT: Executing this program will erase all custom settings for Home Theater, Macros, Learned Keys, Keymoved Keys, and Favorite Channels.

- Press and hold **SETUP** until the two bottom IR segments flash twice. The **Program Keys** will appear as **SETUP** flashes repeatedly.

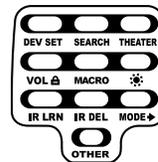

- Press **OTHER** once. The *Other* programming screen will appear.
- Using the **Number Keys**, enter **9 8 0**. The two bottom IR segments will flash twice pause and flash twice again to confirm the unit has been restored to factory default settings.
- Exit programming by pressing **HOME** once. The display will return to the last-selected device menu screen.



KAMELEON 8-DEVICE REMOTE

MANUFACTURER'S CODES

SETUP CODES FOR AUDIO AMPLIFIERS

GE	0078
Harman/Kardon	0892
JVC	0331
Left Coast	0892
Marantz	0892
Optimus	0395
Philips	0892
Polk Audio	0892
Realistic	0395
Soundesign	0078
Victor	0331
Wards	0078
Yamaha	0354

SETUP CODES FOR AUDIO RECEIVERS

ADC	0531
Aiwa	1089, 1405, 0121, 0158, 0189, 1388
Alco	1390
Anam	1609
Apex Digital	1257
Audiotronic	1189
Audiovox	1390
Bose	1229
Capetronic	0531
Carver	1089, 1189, 0189
Classic	1352
Denon	1360
Harman/Kardon	0110, 0189
Integra	0135, 1298
JBL	0110, 1306
JVC	0074, 1374
KLH	1390
Kenwood	1313, 1027, 1570, 1569, 0186
Koss	1366
Lasonic	1798
Linn	0189
MCS	0039
Magnavox	1089, 1189, 1269, 0189, 0531
Marantz	1089, 1189, 0039, 0189
Musicmagic	1089
Norcent	1389
Onkyo	0135, 0842, 1298
Optimus	1023, 0186, 0531, 0670
Oritron	1366, 1380
Panasonic	1518, 0039
Philips	1089, 1189, 1269, 0189

Pioneer	1023, 0014, 0150, 0531, 0630, 1384
Polk Audio	0189
Proscan	1254
Quasar	0039
RCA	1023, 1254, 0531, 1390, 1609
Samsung	1295
Sansui	1089, 0189
Sharp	0186
Sharper Image	1385
Sherwood	1653
Sony	1058, 1258, 1158, 0158, 1558, 1658, 1758
Soundesign	0670
Stereophonics	1023
Sunfire	1313
Technics	1308, 1309, 1518, 0039
Thorens	1189
Venturer	1390
Victor	0074
Wards	0014, 0158, 0189
Yamaha	0176, 0186, 1176, 1375

SETUP CODES FOR CABLE BOXES

ABC	0003, 0008, 0014
Americast	0899
Bell & Howell	0014
Bell South	0899
Director	0476
General Instrument	0476, 0003, 0276, 0810
GoldStar	0144
Hamlin	0009, 0273
Jerrold	0476, 0003, 0276, 0014, 0810
Memorex	0000
Motorola	0476, 0276, 0810
Pace	0237
Panasonic	0000, 0107
Paragon	0000
Philips	0305, 0317
Pioneer	0877, 0144, 0533, 1877
Pulsar	0000
Quasar	0000
Regal	0273, 0279
Runco	0000
Samsung	0144
Scientific Atlanta	0877, 0008, 0477, 1877
Sony	1006
Starcom	0003
Supercable	0276
Torx	0003
Toshiba	0000
Zenith	0000, 0525, 0899

USER'S GUIDE

SETUP CODES FOR CD PLAYERS

Aiwa	0157
Burmester	0420
California Audio Labs	0029
Carver	0157
Classic	1297
DKK	0000
DMX Electronics	0157
Denon	0873
Garrard	0420
Genexxa	0032
Harman/Kardon	0157
Hitachi	0032
JVC	0072
KLH	1318
Kenwood	0681, 0626, 0028
Krell	0157
Linn	0157
MCS	0029
MTC	0420
Magnavox	0157
Marantz	0626, 0029, 0157
Miro	0000
Mission	0157
NSM	0157
Onkyo	0868
Optimus	1063, 0000, 0032, 0420
Panasonic	0029
Parasound	0420
Philips	0626, 0157
Pioneer	1063, 1062, 0032
Polk Audio	0157
Proton	0157
QED	0157
Quasar	0029
RCA	1062, 0032
Realistic	0420
Rotel	0157, 0420
SAE	0157
Sansui	0157
Sharp	0861
Sonic Frontiers	0157
Sony	0490, 0000, 0100
TAG McLaren	0157
TDK	1208
Tascam	0420
Teac	0420
Technics	0029
Victor	0072
Wards	0157
Yamaha	0888, 0036, 1292

SETUP CODES FOR DVD PLAYERS

Aiwa	0641
Apex Digital	0672, 0717, 0755, 0794, 0795, 0796, 0797, 0830
Blaupunkt	0717
Blue Parade	0571
Broksonic	0695
Cinevision	0876
DVD2000	0521
Daewoo	0784
Denon	0490, 0634
Emerson	0591
Enterprise	0591
Fisher	0670
GE	0522, 0717, 0815
Go Video	0715, 0783
Greenhill	0717
Harman/Kardon	0582, 0702
Hitachi	0573, 0664
Hiteker	0672
IRT	0783
Integra	0627
JBL	0702
JVC	0558, 0623, 0867
KLH	0717
Kenwood	0490, 0534, 0682
Magnavox	0503, 0675
Marantz	0539
Microsoft	0522
Mintek	0717
Mitsubishi	0521
Nesa	0717
Norcent	0872
Onkyo	0503, 0627
Panasonic	0490, 0632, 1362, 1462, 1490
Philips	0503, 0539, 0646, 0854
Pioneer	0525, 0571, 0632
Polk Audio	0539
Proscan	0522
RCA	0522, 0571, 0717, 0822
Rotel	0623
Sampo	0698
Samsung	0573, 0820
Sansui	0695
Sanyo	0670, 0695
Sharp	0630
Sherwood	0633
Shinsonic	0533
Sony	0533, 0864
Sylvania	0675, 0821

continued on next page...



KAMELEON 8-DEVICE REMOTE

MANUFACTURER'S CODES

SETUP CODES FOR DVD PLAYERS (CONTINUED)

Technics	0490
Theta Digital	0571
Toshiba	0503, 0695, 1045
Tredex	0799
Urban Concepts	0503
XBox	0522
Yamaha	0490, 0539, 0545, 0817
Zenith	0503, 0591

SETUP CODES FOR DVD PLAYER/VCR COMBOS

Go Video	0715
Hitachi	0664 (for VCR use 0000)
RCA	0822 (for VCR use 0060)
Samsung	0820
Sansui	0695
Sharp	0630 (for VCR use 0848)
Sony	0864
Sylvania	0675 (for VCR use 0000)
Toshiba	0503

SETUP CODES FOR HOME AUTOMATION

GE	0240
One For All	0167
RadioShack	0240
Security System	0167
Universal X10	0167
X10	0167

SETUP CODES FOR PVRs

Panasonic	0616
Philips	0618
ReplayTV	0614, 0616
Sonic Blue	0614, 0616
Sony	0636
Tivo	0618, 0636

SETUP CODES FOR SATELLITE RECEIVERS

AlphaStar	0772
Chaparral	0216
Crossdigital	1109
DirectTV	0392, 0566, 0639, 1142, 0247, 0749, 0819, 1109, 1749, 1856
Dish Network System	1005, 0775
DishPro	1005, 0775

Echostar	1005, 0775
Expressvu	0775
GE	0566
GOI	0775
General Instrument	0869
HTS	0775
Hitachi	0819
Hughes Network Systems	1142, 0749, 1749
JVC	0775
Magnavox	0724, 0722
Memorex	0724
Mitsubishi	0749
Motorola	0869
Next Level	0869
Panasonic	0247, 0701
Paysat	0724
Philips	1142, 0749, 0724, 1076, 0722, 1749
Proscan	0392, 0566
RCA	0392, 0566, 0855, 0143
RadioShack	0869
SKY	0856
Samsung	1109, 1276
Sony	0639
Star Choice	0869
Toshiba	0749, 0790, 1749
UltimateTV	0392, 0639
Uniden	0724, 0722
Zenith	0856, 1856

SETUP CODES FOR SATELLITE RECEIVER/ PVR COMBS

Echostar	1005, 0775
Expressvu	0775
Hughes Network Systems	1142
Philips	1142
Proscan	0392
RCA	0392
Sony	0639

SETUP CODES FOR TVs

AOC	0030
Admiral	0093, 0463
Advent	0761
Aiko	0092
Aiwa	0701
Akai	0030, 0702
Alaron	0179
America Action	0180

USER'S GUIDE

Ampro	0751	JCB	0000
Anam	0180	JVC	0463,0053
Apex Digital	0748,0765	KEC	0180
Audiovox	0451,0180,0092,0623	KTV	0180,0030
Baysonic	0180	Kenwood	0030
Bell & Howell	0154,0016	Konka	0707
Bradford	0180	LG	0056
Broksonic	0236,0463	LXI	0047,0054,0154,0156,0178,0747
CXC	0180	Logik	0016
Candle	0030,0056	Luxman	0056
Carnivale	0030	MGA	0150,0030,0178
Carver	0054	MTC	0060,0030,0056
Celebrity	0000	Magnavox	0054,0030,0179,1254,1454
Celera	0765	Majestic	0016
Changhong	0765	Marantz	0054,0030
Cineral	0451,0092	Matsushita	0250
Citizen	0060,0030,0056,0092	Megatron	0178,0145
Clarion	0180	Memorex	0154,0250,0463,0150,0178,0179,0016
Concerto	0056	Midland	0047,0017,0051,0747
Contec	0180	Minutz	0021
Craig	0180	Mitsubishi	0093,0150,0178
Crosley	0054	Motorola	0093
Crown	0180	Multitech	0180
Curtis Mathes	0047,0054,0154,0451,0093,0060,0030, 0145,0056,0016,0166,0466,0702,0747, 1147,1347	NAD	0156,0178,0166
Daewoo	0451,0092,0623	NEC	0030,0056
Denon	0145	NTC	0092
Dumont	0017	Nikko	0030,0178,0092
Dwin	0720,0774	Norcent	0748
Electroband	0000	Onwa	0180
Emerson	0154,0236,0463,0180,0178,0179,0623	Optimus	0154,0250,0166
Envision	0030	Optonica	0093
Fisher	0154	Orion	0236,0463,0179
Fujitsu	0179,0683	Panasonic	0250,0051
Funai	0180,0179,0171	Penney	0047,0156,0051,0060,0030,0178,0021, 0747,1347
Futuretech	0180	Philco	0054,0463,0030,0145
GE	0047,0051,0451,0178,0021,0747,1147, 1347	Philips	0054,0690,1454
Gibralter	0017,0030	Pilot	0030
GoldStar	0030,0178	Pioneer	0166,0679
Gradiente	0053,0056	Portland	0092
Grumpy	0180,0179	Princeton	0717
Hallmark	0178	Prism	0051
Harley Davidson	0179	Proscan	0047,0747
Harman/Kardon	0054	Proton	0178,0466
Harvard	0180	Pulsar	0017
Havermy	0093	Quasar	0250,0051
Hitachi	0145,0056,0016,1145	RCA	0047,0090,0679,0747,1047,1147,1247, 1347,1447
Infinity	0054	RadioShack	0047,0154,0180,0030,0178,0056,0747
Inteq	0017	Realistic	0154,0180,0030,0178,0056
JBL	0054		

continued on next page...



KAMELEON 8-DEVICE REMOTE

MANUFACTURER'S CODES

SETUP CODES FOR TVs (CONTINUED)

Runco	0017, 0030, 0603
SSS	0180
Sampo	0030
Samsung	0060, 0030, 0178, 0056, 0702
Sansei	0451
Sansui	0463
Sanyo	0154, 0799
Scotch	0178
Scott	0236, 0180, 0178, 0179
Sears	0047, 0054, 0154, 0156, 0178, 0179, 0056, 0171, 0747
Semivox	0180
Semp	0156
Sharp	0093, 0688, 0689
Signature	0016
Sony	0000, 1100
Soundesign	0180, 0178, 0179
Squareview	0171
Starlite	0180
Supreme	0000
Sylvania	0054, 0030, 0171
Symphonic	0180, 0171
TMK	0178, 0056
TNGi	0017
TVS	0463
Tandy	0093
Technics	0250, 0051
Technol Ace	0179
Techwood	0051, 0056
Teknika	0054, 0180, 0150, 0060, 0179, 0056, 0016, 0092
Telefunken	0056, 0702
Toshiba	0154, 0156, 0060, 1256, 1356
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0178
Wards	0054, 0030, 0178, 0021, 0179, 0056, 0016
Waycon	0156
White Westinghouse	0463, 0623
Yamaha	0030
Zenith	0017, 0463, 0178, 0016, 0092

SETUP CODES FOR TV/DVD PLAYER COMBOS

Apex Digital	0830
Broksonic	0695, 0868
Panasonic	1490

Philips	0854
Sharp	0630
Sylvania	0821
Toshiba	0695

SETUP CODES FOR TV/VCR COMBOS

Broksonic	1479
Citizen	1278
Curtis Mathes	1035
Daewoo	1278
Emerson	1278, 1479
Funai	0000
GE	0240, 0807, 1035, 1060
GoldStar	1237
Harley Davidson	0000
Hitachi	0000
Lloyd's	0000
MGA	0240
Magnasonic	1278
Magnavox	0000, 1781
Magnin	0240
Memorex	0037, 1162, 1237
Mitsubishi	0807
Optimus	1162
Orion	1479
Panasonic	1162, 1035
Penney	0240, 1035, 1237
Quasar	1162, 1035
RCA	1060, 0240, 0807, 1035
Sansui	0000, 1479
Sanyo	0240
Sears	0000, 1237
Sharp	0807
Sony	0000, 1232
Sylvania	1781
Symphonic	0000
Thomas	0000
Toshiba	0845
White Westinghouse	1278
Zenith	0000, 1479

SETUP CODES FOR VCRs

Admiral	0048, 0209
Adventura	0000
Aiko	0278
Aiwa	0037, 0000
America Action	0278
American High	0035
Asha	0240

USER'S GUIDE

Audiovox	0037, 0278	Minolta	0042
Beaumarck	0240	Mitsubishi	0067, 0043
Bell & Howell	0104	Motorola	0035, 0048
Broksonic	0184, 0121, 0209, 0002, 0479, 1479	Multitech	0000
CCE	0278	NEC	0104, 0067
Calix	0037	Nikko	0037
Canon	0035	Noblex	0240
Carver	0081	Olympus	0035
Cineral	0278	Optimus	0162, 0037, 0048, 0104, 0432, 1162
Citizen	0037, 0278, 1278	Orion	0184, 0209, 0002, 0479, 1479
Craig	0037, 0047, 0240	Panasonic	0035, 0162, 0225, 0616, 1035, 1162
Curtis Mathes	0060, 0035, 0162, 0760, 1035	Penney	0035, 0037, 0240, 0042, 1035, 1237
Cybernex	0240	Pentax	0042
Daewoo	0045, 0278, 1278	Philco	0035, 0209, 0479
Denon	0042	Philips	0035, 0081, 0618, 1081, 1181
Dynatech	0000	Pilot	0037
Electrohome	0037	Pioneer	0067
Electroponic	0037	Polk Audio	0081
Emerex	0032	Profitronic	0240
Emerson	0037, 0184, 0000, 0121, 0043, 0209, 0002, 0278, 0479, 1278, 1479	Proscan	0060, 0760, 1060
Fisher	0047, 0104	Pulsar	0039
Fuji	0035, 0033	Quasar	0035, 0162, 1035, 1162
Funai	0000	RCA	0060, 0240, 0042, 0760, 0880, 1035, 1060
GE	0060, 0035, 0240, 0760, 1035, 1060	RadioShack	0000
Garrard	0000	Radix	0037
Go Video	0432	Randex	0037
GoldStar	0037, 1237	Realistic	0035, 0037, 0048, 0047, 0000, 0104
Gradiente	0000	ReplayTV	0614, 0616
HI-Q	0047	Runco	0039
Harley Davidson	0000	STS	0042
Harman/Kardon	0081	Samsung	0240, 0045
Hitachi	0000, 0042	Sanky	0048, 0039
Hughes Network Systems	0042	Sansui	0000, 0067, 0209, 0479, 1479
JVC	0067	Sanyo	0047, 0240, 0104
KEC	0037, 0278	Scott	0184, 0045, 0121, 0043
Kenwood	0067	Sears	0035, 0037, 0047, 0000, 0042, 0104, 1237
Kodak	0035, 0037	Semp	0045
LXI	0037	Sharp	0048, 0848
Lloyd's	0000	Shogun	0240
MEI	0035	Sonic Blue	0614, 0616
MGA	0240, 0043	Sony	0035, 0032, 0000, 0033, 0636, 1232
MGN Technology	0240	Sylvania	0035, 0081, 0000, 0043, 1781
MTC	0240, 0000	Symphonic	0000
Magnasonic	1278	TMK	0240
Magnavox	0035, 0039, 0081, 0000, 1781	Teac	0000
Magnin	0240	Technics	0035, 0162
Marantz	0035, 0081	Teknika	0035, 0037, 0000
Marta	0037	Thomas	0000
Matsushita	0035, 0162	Tivo	0618, 0636
Memorex	0035, 0162, 0037, 0048, 0039, 0047, 0240, 0000, 0104, 0209, 0479, 1162, 1237		

continued on next page...

KAMELEON 8-DEVICE REMOTE

MANUFACTURER'S CODES

SETUP CODES FOR VCRs (CONTINUED)

Toshiba	0045, 0043, 0845
Totevision	0037, 0240
Unitech	0240
Vector	0045
Video Concepts	0045
Videomagic	0037
Videosonic	0240
Villain	0000
Wards	0060, 0035, 0048, 0047, 0081, 0240, 0000, 0042, 0760
White Westinghouse	0209, 1278
XR-1000	0035, 0000
Zenith	0039, 0000, 0209, 0033, 0479, 1479

SETUP CODES FOR VIDEO ACCESSORIES

Panasonic	1120
Pioneer	1010
Princeton	0113, 0295
Samsung	1190
Sensory Science	1126
Sharp	1010

ABOUT UPGRADING

Your OFA Kameleon 8-Device Remote has the largest infrared code library available and contains a unique feature that allows new codes to be added to its memory over the phone. In a matter of seconds, your OFA Kameleon 8-Device Remote will quickly and reliably record the new information without complex plugs, adapters, or attachments.

This means that as you buy new products in the future, the OFA Kameleon 8-Device Remote will never become obsolete. Simply call our consumer help-line, and one of our customer service representatives will assist you through the entire process of upgrading your OFA Kameleon 8-Device Remote.

Consumer Help-Line: (330) 405-8620

NOTE: Universal Electronics reserves the right to replace a returned remote-control with a new one of equal or superior functionality.

UPGRADE PROCEDURE

1. Call our Consumer Help-Line at: (330) 405-8620 on any business day, between 9 AM and 5:30 PM, EST.
2. Our customer service agent will ask for and record the brand name(s) and model number(s) of your device(s). Then the agent will lead you through the upgrade procedure by asking you to place your telephone's speaker next to the **CH** keys on the OFA Kameleon 8-Device Remote (as shown below).

NOTE: Only use a land-line phone for the upgrade procedure. Do not use a mobile phone because it will not transmit the signals correctly.



In a matter of seconds, new setup codes for your device(s) will be transmitted through the telephone and stored in your OFA Kameleon 8-Device Remote.

3. After your OFA Kameleon 8-Device Remote has been successfully upgraded by telephone, stay on the line. Our customer service agent will ensure that your unit is working properly with your device(s) and answer any other questions you may have.

UPGRADE EXCLUSIONS

- Home entertainment or home automation devices controlled by radio frequency (RF/UHF), wired, or ultrasonic remote controls. Only devices controlled by infrared remote controls are covered.
- Home entertainment or home automation devices not controlled by remote controls.
- Broken or defective product.
- Products that operate over 100 kHz.
- Infrared keyboards and infrared pointing devices (such as mouse substitutes).
- All products for sale and/or use outside the continental United States, Hawaii, Alaska, or Canada.

USER'S GUIDE

TROUBLESHOOTING

PROBLEM: No display at all times.

SOLUTION: Replace batteries with four new AAA alkaline batteries.

PROBLEM: No display when programming.

SOLUTION: Display has turned off due to inactivity. Start programming again and do not pause while performing instructions.

PROBLEM: During programming, the two bottom IR segments display a long flash.

SOLUTION: An invalid entry has occurred. Check the keys to be pressed and start program again.

PROBLEM: How do I stop programming?

SOLUTION: Press **HOME** once to return to the *Program Keys* screen. Press **HOME** once more to exit completely.

PROBLEM: The unit does not control home entertainment devices or commands are not working properly.

SOLUTION: Try all listed codes for the device brands being set up. Make sure they can be operated with an infrared remote control.

PROBLEM: Tried *Searching For Your Code* method and still could not find a working code.

SOLUTION: Perform *Restoring Factory Default Settings* on page 23. Then repeat *Searching For Your Code* on page 11.

PROBLEM: Cannot program a macro onto **M1 ~ M4** or **POWER** keys.

SOLUTION: Make sure the total number of key presses being programmed is less than 15.

PROBLEM: Power macro does not execute.

SOLUTION: First, press the **Home Theater** key once, then press **POWER** once.

PROBLEM: Favorite channel function does not work properly.

SOLUTION: Some devices (e.g., Cable Boxes or Satellite Receivers) use two-digit channel numbers. During programming, press **ENTER** or **OK** once after entering a channel number (e.g., **0 2 ENTER** for channel 2). See *Programming Favorite Channel Scan* on page 22.

PROBLEM: Changing channels does not work properly.

SOLUTION: If the original remote control required pressing **ENTER** to change channels, then press **ENTER** on the remote control after entering channel numbers.

PROBLEM: No remote control of volume.

SOLUTION: See *Changing Volume Lock* on page 14 to lock/unlock volume.

PROBLEM: Two bottom IR segments flash when a key is pressed, but home entertainment device does not respond.

SOLUTION: Make sure the remote control is aimed at your home entertainment device and is not farther than 15 feet away.

PROBLEM: **CH▲** and **CH▼** do not work for your RCA TV.

SOLUTION: Due to RCA design (1983-1987), only the original remote control will operate these functions.


PROBLEM: Pressing **SCROLL** one or times in **CD, DVD, PVR** or **Home Theater** mode, does not display a secondary menu screen.

SOLUTION: Even though **SCROLL** is displayed, for these modes, there are no additional menu screens.

ONE FOR ALL KAMELEON 8-DEVICE REMOTE


DEVICE MENU SCREENS

PROGRAMMING MAIN MENU

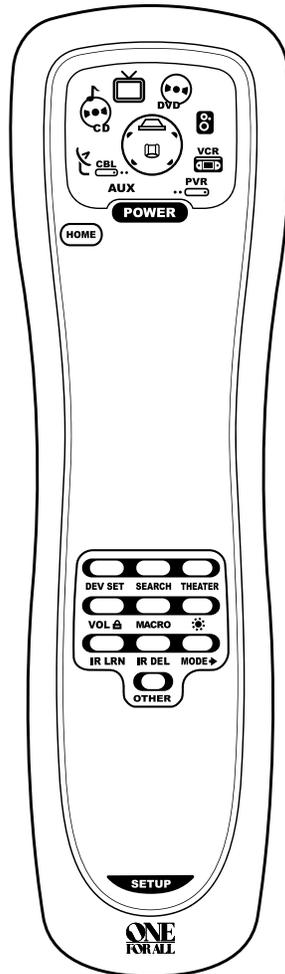

Pressing and holding **SETUP** displays the *Programming Main Menu* screen. Use the **Program Keys** to program device control (**DEV SET**), code search (**SEARCH**), home theater mode (**THEATER**), volume lock (**VOL**), macros (**MACRO**), display brightness (**☼**), function learning (**IR LRN** and **IR DEL**), device key reassignment (**MODE**), or other functions (**OTHER**). See the *Table of Contents* on page 2 to locate a section of interest.

AUDIO MAIN MENU

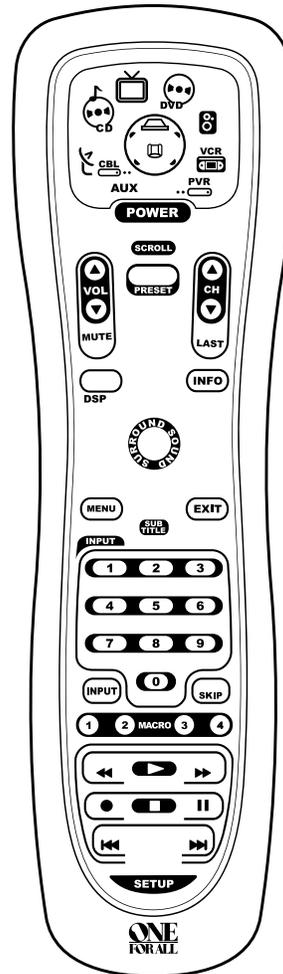


Pressing **AUDIO** once displays the *AUDIO Main Menu* screen. After device programming, use these keys to remotely control your Audio Receiver's or Amplifier's volume and stations, select source inputs, operate transport functions on a built-in CD player (or DVD player, if HTIB device), and access menu, surround, or preset functions.


Pressing **SCROLL** one or more times will display secondary *AUDIO* menus (see next two pages).

USER'S GUIDE

AUDIO SURROUND MENU

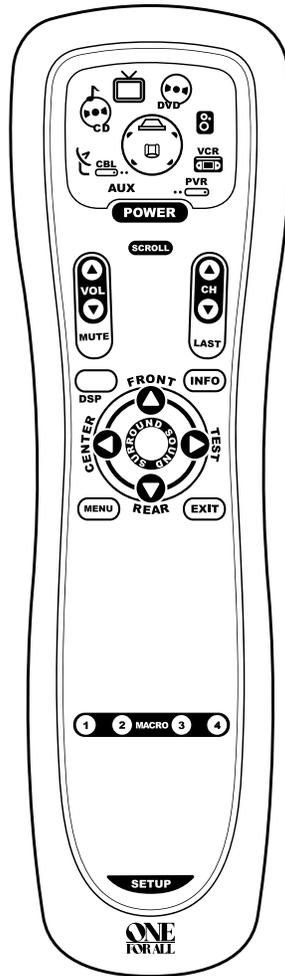

AUDIO MENU

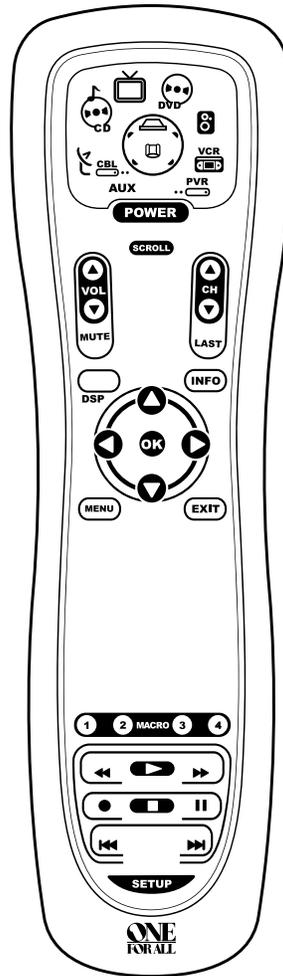


Pressing **SCROLL** once (on the *AUDIO Main Menu*, as shown on the previous page, right side) displays the *AUDIO Surround Menu* screen. Use these keys to remotely control your Audio Receiver's or Amplifier's volume, stations, and surround functions.

Pressing **SCROLL** once (on the *AUDIO Surround Menu*, as shown on the left) displays the *AUDIO Menu* screen. Use these keys to remotely control your Audio Receiver's or Amplifier's volume, stations, and surround functions.


ONE FOR ALL KAMELEON 8-DEVICE REMOTE

DEVICE MENU SCREENS (cont'd)

AUDIO PRESETS MENU

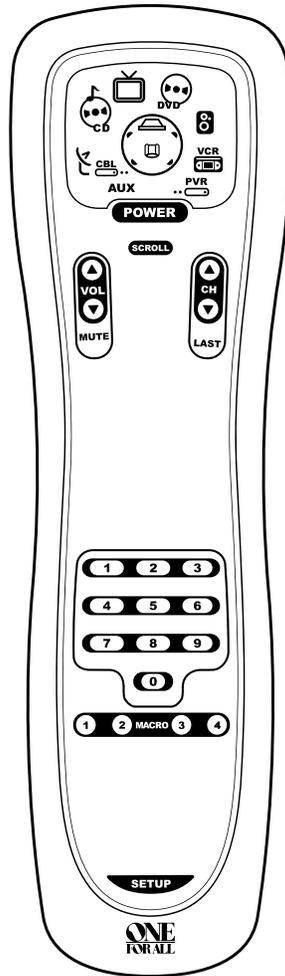

AUX MAIN MENU

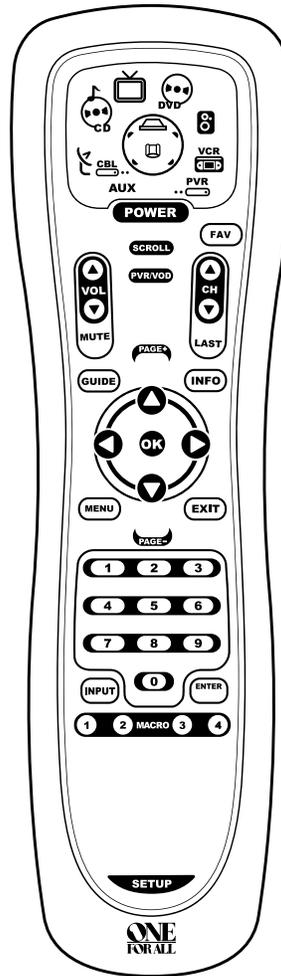

Pressing **SCROLL** once (on the *AUDIO Menu*, as shown on the previous page, right side), displays the *AUDIO Presets Menu* screen. Use these keys to remotely access your Audio Receiver's or Amplifier's preset stations.


Pressing **SCROLL** once more returns the display to the *AUDIO Main Menu* screen (as shown on page 32, right side).

Pressing **AUX** once displays the *AUX Main Menu* screen. After device programming, use these keys to remotely control all your device's common features, such as volume and channels, and menu, guide, and navigation functions.


Pressing **SCROLL** once will display a secondary *AUX* menu (on shown on the next page, left side).

USER'S GUIDE

AUX PVR/VOD MENU

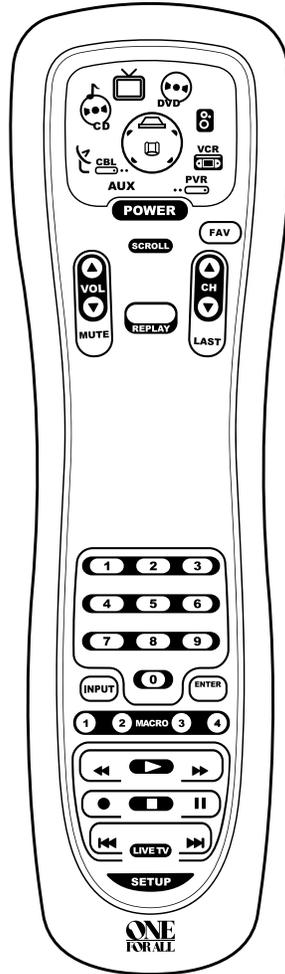

CBL/SAT MAIN MENU

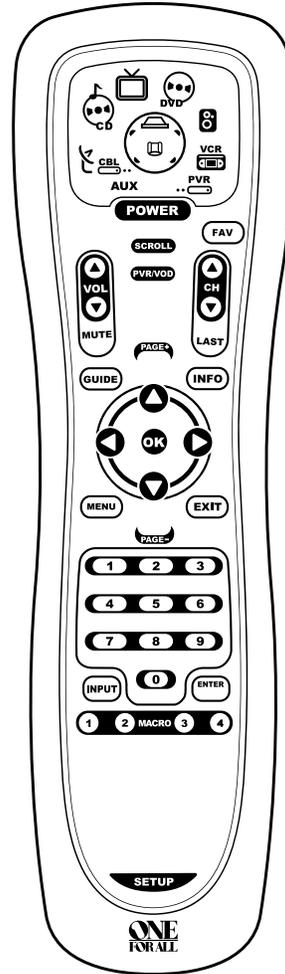

Pressing **SCROLL** once (on the *AUX Main Menu*, as shown on previous page, right side) displays the *AUX PVR/VOD Menu* screen. Use these keys to remotely control all your device's VOD and PVR functions, such as transport keys, replay, and live TV.

Pressing **SCROLL** once more returns the display to the *AUX Main Menu* screen (as shown on the previous page, right side).


Pressing **CBL/SAT** once displays the *CBL/SAT Main Menu* screen. After Cable Box or Satellite Receiver programming, use these keys to remotely control all common features, such as volume and channels, and menu, guide, and navigation functions.

Pressing **SCROLL** once will display a secondary *CBL/SAT* menu (on shown on the next page, left side).


ONE FOR ALL KAMELEON 8-DEVICE REMOTE

DEVICE MENU SCREENS (cont'd)

CBL/SAT PVR/VOD MENU

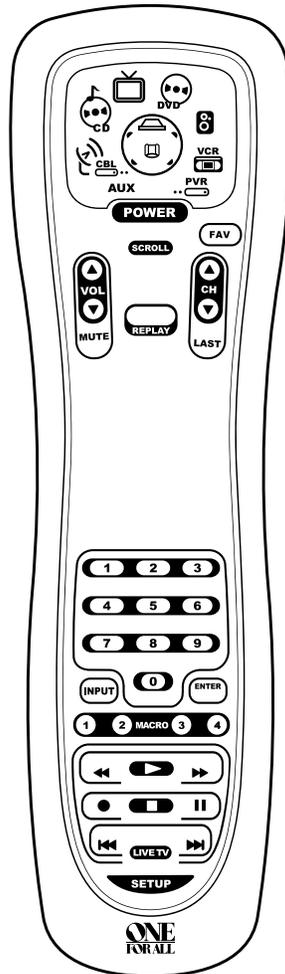

CD MAIN MENU

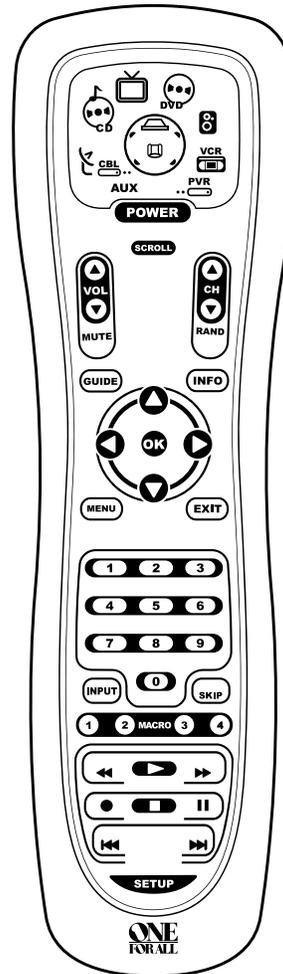


Pressing **SCROLL** once (on the *CBL/SAT Main Menu*, as shown on previous page, right side) displays the *CBL/SAT PVR/VOD Menu* screen. Use these keys to remotely control all your device's VOD and PVR functions, such as transport keys, replay, and live TV.

Pressing **SCROLL** once more returns the display to the *CBL/SAT Main Menu* screen (as shown on the previous page, right side).

Pressing **CD** once displays the *CD Main Menu* screen. After device programming, use these keys to remotely control all your CD player's common features, such as transport keys and skip, menu, and random functions.


USER'S GUIDE

DVD MAIN MENU

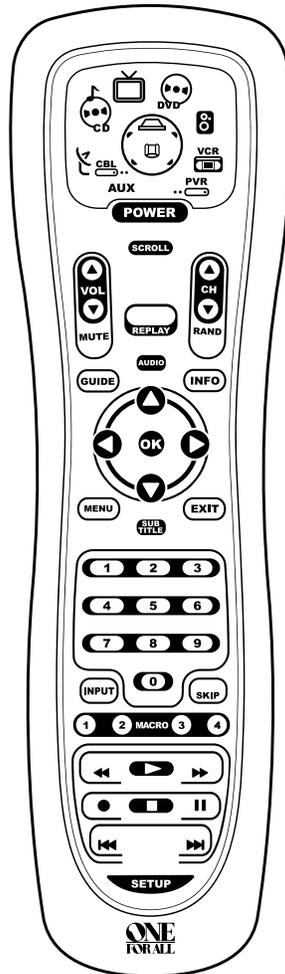

Pressing **DVD** once displays the *DVD Main Menu* screen. After device programming, use these keys to remotely control all your DVD player's common features, such as transport keys and menu, navigation, subtitle, and audio functions.

HOME THEATER MAIN MENU

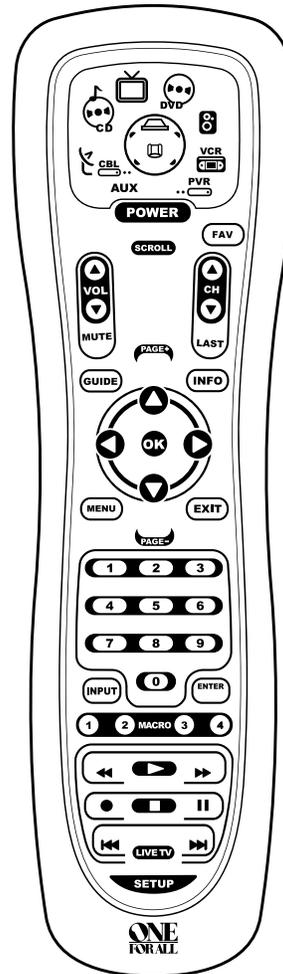


After mode programming, pressing **Home Theater** once displays the *Home Theater Main Menu* screen. Use these keys to remotely access all common features and functions of your home theater system. For details, see *Using The Home Theater Mode* on page 12.

ONE FOR ALL KAMELEON 8-DEVICE REMOTE


DEVICE MENU SCREENS (cont'd)

PVR MAIN MENU

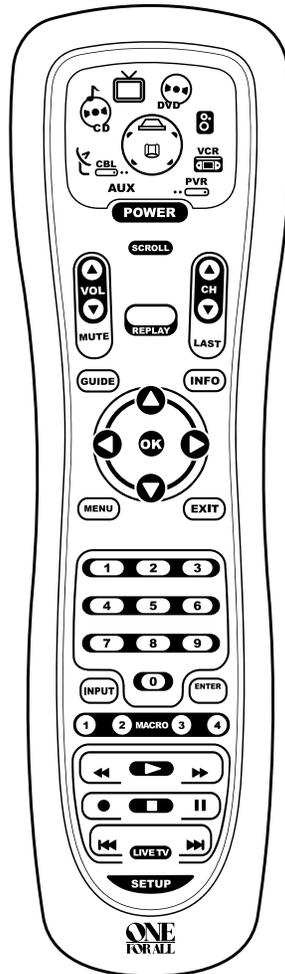

Pressing **PVR** once displays the *PVR Main Menu* screen. After device programming, use these keys to remotely control all your PVR's (or DVR's) common features, such as transport keys and menu, guide, navigation, replay, and live TV functions.


TV MAIN MENU

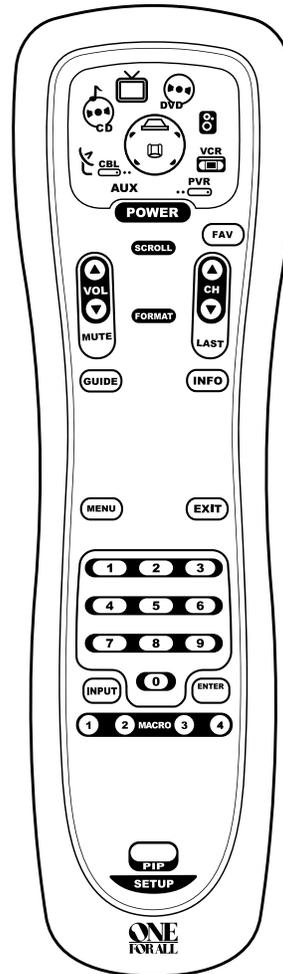

Pressing **TV** once displays the *TV Main Menu* screen. After device programming, use these keys to remotely control all your TV's common features, such as volume and channels, and last channel, menu, and information/display functions.

Pressing **SCROLL** one or more times will display secondary *TV* menus (see the next page).

USER'S GUIDE

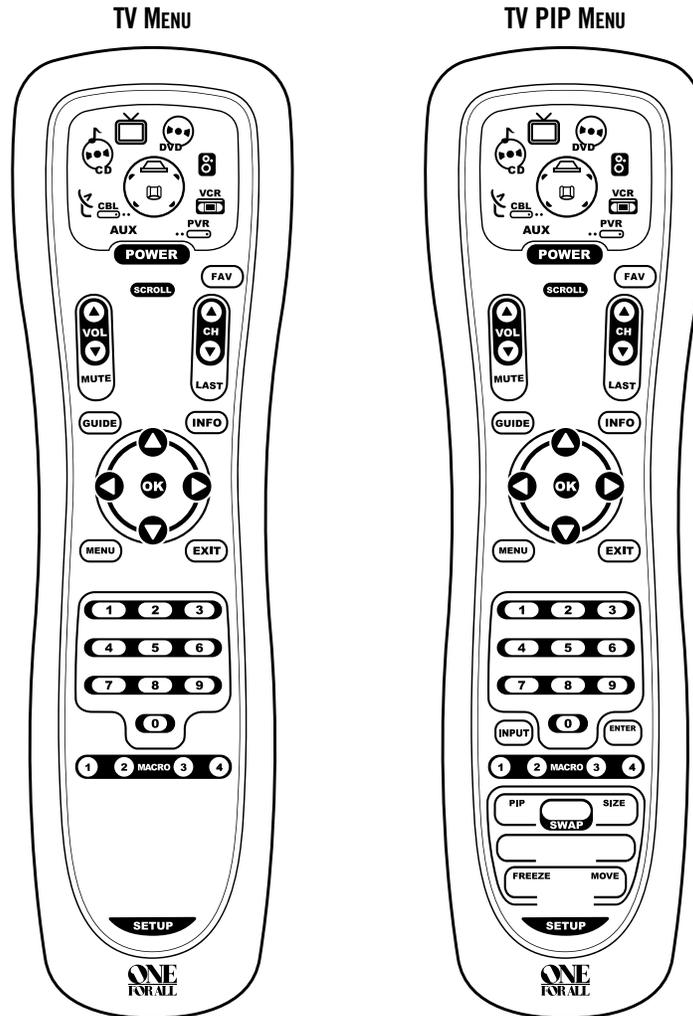

Pressing **SCROLL** once (on the *TV Main Menu*, as shown on previous page, right side) displays the *TV Menu* screen. Use these keys to remotely control all your TV's common menu features.


Pressing **SCROLL** once (on the *TV Menu*, as shown on the left) displays the *TV PIP Menu* screen. Use these keys to remotely control all your TV's common PIP features.

Pressing **SCROLL** once more returns the display to the *TV Main Menu* screen (as shown on the previous page, right side).


ONE FOR ALL KAMELEON 8-DEVICE REMOTE

DEVICE MENU SCREENS (cont'd)

VCR MAIN MENU

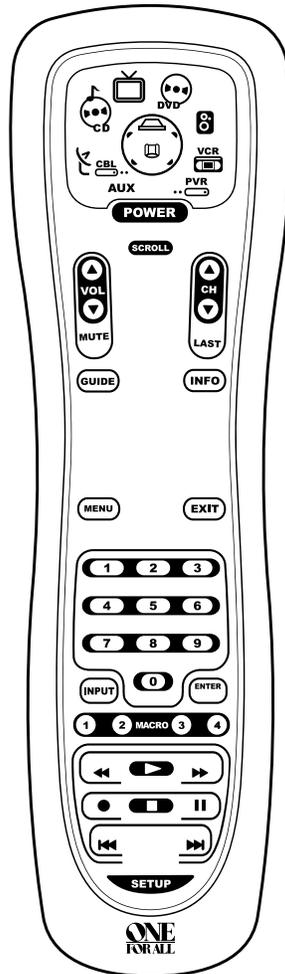

VCR MENU

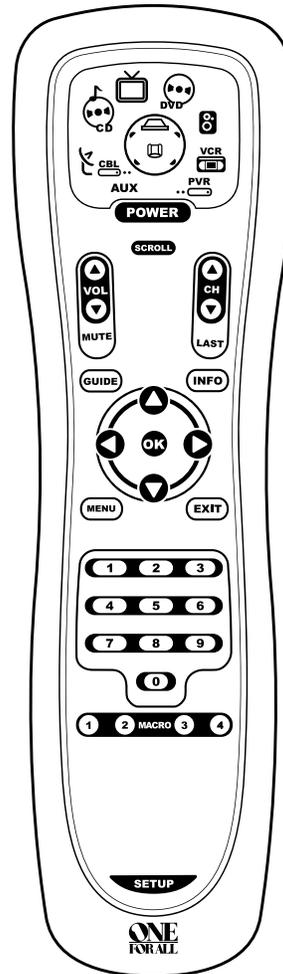

Pressing **VCR** once displays the *VCR Main Menu* screen. After device programming, use these keys to remotely control all your TV's common features, such as volume and channels, and last channel, menu, and information/display functions.

Pressing **SCROLL** once will display a secondary *VCR menu* (on the right).

Pressing **SCROLL** once (on the *VCR Main Menu*, as shown on the left) displays the *VCR Menu* screen. Use these keys to remotely control all your VCR's common features.

Pressing **SCROLL** once more returns the display to the *VCR Main Menu* screen (as shown on the left).

USER'S GUIDE

CUSTOMER SUPPORT

For assistance, please contact us in any of the following ways:

- **E-mail:** ofasupport@ueic.com
- **Internet:** <http://www.oneforall.com>
- **Consumer Help-Line:** (330) 405-8620

INSTRUCTIONS TO THE USER

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide a reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

LIMITED WARRANTY

Universal Electronics warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for ninety (90) days from the date of original purchase.

This limited warranty is valid only on Universal Electronics product purchased and used in the United States of America or Canada, and does not apply to products used for industrial or commercial purpose.

The limited warranty does not cover damage or failure caused by products or services not supplied by Universal Electronics, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of God.

There are no express warranties except as listed above. Universal Electronics SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product during the warranty period, please return the product, preferably in the original carton, along with your purchase receipt, to the store of original purchase. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

For warranty information only, call:
(330) 405-8655



KAMELEON 8-DEVICE REMOTE

BATTERY USE AND SAFETY

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only new batteries of the required size.
- Do not mix old and new batteries, different types of batteries (e.g., standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the remote control for an extended period, remove the batteries. They can leak chemicals that can destroy electronic parts.

ADDITIONAL INFORMATION

 


Kameleon is a trademark (registration pending) of Universal Electronics.


Copyright 2003 by Universal Electronics. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

The OFA Kameleon 8-Device Remote (URC-9960) is compatible for use in North America, excluding Mexico.

URC-99960B00

05/03

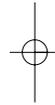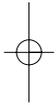

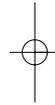

ONE
FORALL

